

Sartopure GF Plus

Adsorptive High Capacity Filter Cartridges



Description

Sartopure GF Plus cartridges are optimized for the protection of downstream membrane filter systems and clarification in food and beverage applications. Due to their high adsorptive power by glass fiber fleeces, they are the ideal solution for removal of colloids from beverages.

Applications

Sartopure GF Plus are ideal for the prefiltration of:

- Water
- Wine
- other beverages

High Adsorption

Based on electrostatic forces of attraction, the negatively charged glass fiber material retains positively charged, small particles that would otherwise pass through the filter. These particles can even be smaller than the nominal filter retention rate.

Defined Retention Rates

The key feature of Sartopure GF Plus cartridges is their defined and accurate retention rating >99.9%!

High Profitability

The cartridges' high flow rates at a low differential pressure reduce overall costs as less energy is used. Moreover, a high total throughput guarantees the maximum in process profitability.

Flexibility

Sartopure GF Plus filters are available as standard filter cartridges.

Documentation

Sartopure GF Plus cartridges are designed, developed and manufactured in accordance with a ISO 9001 certified Quality Management System.

Specifications

Materials

Filter Material:	Glass Fiber Fleeces
Support Fleece:	Polypropylene
Core:	Polypropylene
End Caps:	Polypropylene
O-Rings:	Silicone (optional EPDM or Viton)

Retention Rates

0.65 µm, 1.2 µm

Available Sizes | Filtration Area

Cartridges

Size 1	10"	0.6 m ² 6 ft ²
Size 2	20"	1.2 m ² 12 ft ²
Size 3	30"	1.8 m ² 18 ft ²

Available Adapters Cartridges

21, 25, 27, 28

Operating Parameters

Max. Allowable Differential Pressure:	5 bar 75 psi at 20 °C
	2 bar 29 psi at 80 °C
Max. Allowable Back Pressure:	2 bar 29 psi at 20 °C

Depth Filter Cartridges

Sterilization

In-Line Steam Sterilization

134 °C, 20 min. at max differential pressure of 0.5 bar | 7 psi


Sterilization Cycles

In-Line Sterilization: Min. 25

Order Information

Order Code	Pore Size [µm]
Cartridges:	
555**05PX	0.65
555**03PX	1.2

Water Flow Rates for Sartopure GF Plus 10" Standard Cartridges 0.65 µm, 1.2 µm

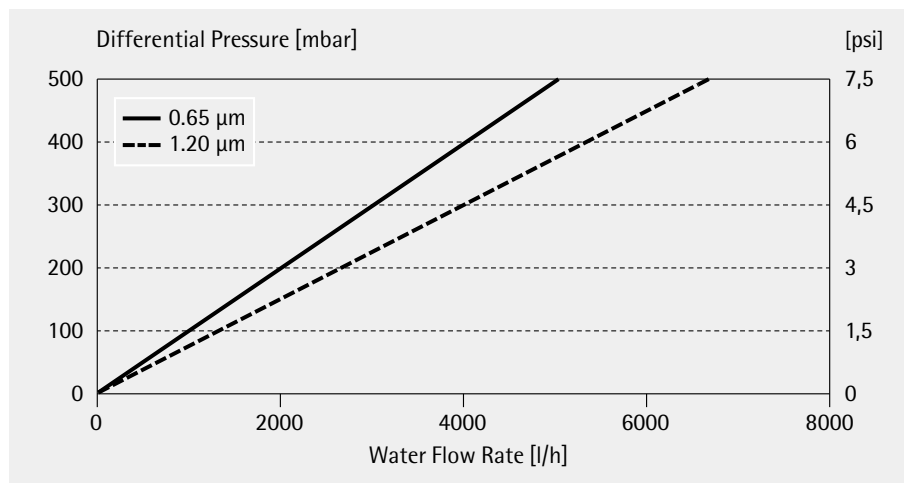

Sartorius AG
Weender Landstrasse 94-108
37075 Goettingen, Germany
Phone +49.551.308.0
Fax +49.551.308.3289
www.sartorius.com
USA +1.631.2544249
UK +44.1372.737100
France +33.1.69192100
Italy +39.055.634041
Spain +34.91.3586100
Japan +81.3.33293366

Specifications subject to change without notice.
Printed and copyrighted by Sartorius - W/sart-000 - G
Publication No.: SGK2007-e04041
Order No.: 85030-519-91